


## Parameters

<b>Electric Parameters:</b>	
Frequency of Carrier wave	433.1580MHz±2‰
Battery of remote	2pcs 7#1.5V Battery
RF sending distance	100m
<b>Environmental Conditions:</b>	
Working temperature	-5°C~45°C
Working relate Humidity	Up to 90%
Storage Temperature	-40°C~+55°C
Storage relative Humidity	Up to 93%
<b>Approve:</b>	
CE	
RoHS	
<b>Production Information:</b>	
Dimension of wireless remote	126×66×17.5(mm)
Weight	115.5g
Housing material	ABS
Installation	No
Protection degree	IP20

## Dimensions

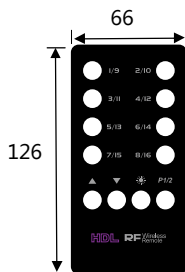

## Remote Key Function:

- The control buttons are "1/9", "2/10", "3/11", "4/12", "5/13", "6/14", "7/15", "8/16", they are equal to 16 key button in 2 different pages.
- The button of "▲", "▼", they are used for dimming.
- The button of "☀", It is used for entering the Dimming Mode.
- The button of "P1/2", it is for shifting the page.
- Set up the control targets in HDL BUS Pro Set up Tool.

## Overview



433M wireless signal Wireless Remote HDL-MWRT12 should be work with HDL-MWH6 , HDL-MRF16.4C. They set up the control target in the HDL-BUS Pro set up Tool, and use the wireless remote can control the target.

## Functions

- Each remote has 2x8 control key button, and each key button can control maximum 99 targets.

## Important Notes

- Please take out the battery if you do not use for a long time.

## Remote Dimming Steps :

1. When set up the key mode as scene or single channel lighting control, the dimming function will be available. For example, key button 1 is set for scene, so key button 1 is a dimming button.
2. Press "☀", enter the dimming mode
3. Press key button 1, scene dimming for the targets which is controlled by key button 1 .
4. Press "▲", "▼" button for dimming , "▲" for increasing dimming output , "▼" for decreasing dimming output.
5. Press "☀" or without operation for 5 seconds, dimming mode will be finished
6. Press "P1/2" button, it is for shifting the page

## Packing list

- MWRT12 1pc
- 7#1.5V Battery 2pcs
- Installation manual 1pc