

USER'S MANUAL

OSD (On Screen Display) Manual Operating Instructions



Thank you for choosing our high quality camera. Before attempting to connect or operate, please read and follow these instructions.

About this Instructions

Before installing and using the Camera, please read this manual Carefully. Be sure to keep it handy for later reference.

Contents

1. Function Features	3
2. Key Buttons	4
3. OSD SETUP Menu for Quick Reference	4
4. OSD Menu Flow Chart	7
5. Explanation of SETUP Menu	9

1. Function Features

Advanced DNR Function

3D Filtering of the Video Signal
Optimizes the Signal to Noise ratio,
giving vas improved low light visibility
and powerful Sens-Up function (up to
258 times magnification)



3D-DNR OFF



3D-DNR ON

High Resolution 550TV Lines

550TV Lines horizontal resolution in
color mode and 600TV Lines
horizontal resolution in BW mode



Standard Camera



550TV Lines Camera

WDR (Wide Dynamic Range)

Capturers cleaner and superior high
resolution pictures even where images
appear dark because there is a strong
back light present.



WDR OFF



WDR ON

HSBLC (Backlight Compensation)

High spotlight BLC is especially effective
to read the number plate of the vehicles
in the street or parking lot at night time.
Especially users can adjust and select
the special requirement area to observe
the target object under the strong spots
of light exist.



BLC OFF



BLC ON

Illumination (0.00001 Lux)

With an incredibly minimum
illumination of amazing 0.00001Lux
can capture good images even in
extremely low light conditions



Standard Image



Min. Illumination Image

2. Key Buttons

Pressing the “SETUP” button prompts the main setup menu.

- “PUSH” button : To access the main setup menu
- “U” button : Manu item UP selection
- “D” button : Manu item DOWN selection
- “L” button : To change data to down
- “R” button : To change data to up


3. OSD SETUP Menu for Quick Reference


SETUP Menu		Default Value	Description
1. LENS		DC : Brightness 50	Manual, DC : Brightness Range : 0~100
2. EXPOSURE			EXPOSURE Sub-Menu
SHUTTER		NTSC : 1/60 (PAL : 1/50)	1/60 (PAL : 1/50),FLK. 1/250,1/500,1/500,1/2000,1/5000 1/10000, 1/100000
BRIGHTNESS		-----	No Operation
AGC		MIDDLE	Adjusts the Maximum Gain Mode OFF,LOW,MIDDLE,HIGH
SENSE-UP		AUTO(X32)	OFF,AUTO (Range : x2~x258)
BLC		OFF	OFF,BLC (BLC Sub-menu) HSBLC (HSBLC Sub-menu)
BLC	GAIN	LOW	LOW,MIDDLE,HIGH
	DEFAULT		Initializes the changed category in BLC menu
	LEFT/RIGHT	2	Range : 0~7
	WIDTH	4	Range : 0~8
	TOP/BOTTOM	3	Range : 0~7
	HEIGHT	3	Range : 0~8
	RETURN		Return to EXPOSURE Sub-menu
HSBLC	LEVEL	5	Range : 0~8
	DEFAULT		Initializes the changed category in HSBLC menu
	LEFT/RIGHT	2	Range : 0~7
	WIDTH	4	Range : 0~8
	TOP/BOTTOM	3	Range : 0~7
	HEIGHT	3	Range : 0~8
	RETURN		

SETUP Menu		Default Value	Description
D-WDR		OFF	OFF : Disable the Wide Dynamic Range Function. Indoor ,Outdoor
RETURN			Return to SETUP menu
3. WHITE BAL		ATW	ATW : Auto Trace WB mode. AWB : Wide Range Trace Mode. AWC→ SETUP Manual (Blue Gain & Red Gain Range : 0~100)
4. DAY NIGHT		COLOR	COLOR/BW, AUTO : Delay (0~63) / S-LEVEL (0~100)/ E-LEVEL(0~100), RESET
5. 3DNR		ON : Level 50	OFF, ON (Level Range : 0~100)
6. SPECIAL			SPECIAL Sub-menu
	1) CAM TITLE	OFF	Title(Max.15 Character),This position is adjustable
	2) D-EFFECT		D-EFFECT Sub – menu.
	FREEZE	OFF	OFF,ON
	MIRROR	OFF	OFF.MIRROR,V-FLIP,ROTATE
	D-ZOOM	OFF	D-ZOOM Range : x1.0~x32.0 PAN Range : -100 ~ 100 TILT Range : -100 ~ 100 RETURN : Return to E-EFFECT Sub-menu
	GAMMA	0.45	Range : 0.05 ~1.00
	NEG.IMAGE	OFF	OFF,ON
	RETURN		RETURN : Return to SPECIAL Sub-menu
	3) MOTION	OFF	Area Select : AREA1~AREA4 Area Display : OFF, ON LEFT/RIGHT Range : 0~100 WIDTH Range : 0~100 TOP/BOTTOM Range : 0~100 HIGH Range : 0~100 SENSITIVITY Range : 0~40 RETURN : Return to SPECIAL Sub-menu
	4) PRIVACY	OFF	Area Select : AREA1~AREA8 Area Display : OFF, ON LEFT/RIGHT Range : 0~100 WIDTH Range : 0~100 TOP/BOTTOM Range : 0~100 HIGH Range : 0~100 SENSITIVITY Range : 0~40 RETURN : Return to SPECIAL Sub-menu
	5) SYNC	INT	Initializes the changed category in SPECIAL menu
	6) RETURN		Return to SETUP menu

SETUP Menu		Default Value	Description
7. ADJUST			ADJUST Sub-menu
	MOTION	OFF	Area Select : AREA1~AREA4 Area Display : OFF, ON LEFT/RIGHT Range : 0~100 WIDTH Range : 0~100 TOP/BOTTOM Range : 0~100 HIGH Range : 0~100 SENSITIVITY Range : 0~40 RETURN : Return to SPECIAL Sub-menu
	PRIVACY	OFF	Area Select : AREA1~AREA8 Area Display : OFF, ON LEFT/RIGHT Range : 0~100 WIDTH Range : 0~100 TOP/BOTTOM Range : 0~100 HIGH Range : 0~100 SENSITIVITY Range : 0~40 RETURN : Return to SPECIAL Sub-menu
	SYNC	INT	Initializes the changed category in SPECIAL menu
	RETURN		Return to SETUP menu
8. RESET			Initializes the changed category in SPECIAL menu
9.EXIT			Save the SETUP menu and exit

4. OSD Menu Flow Chart

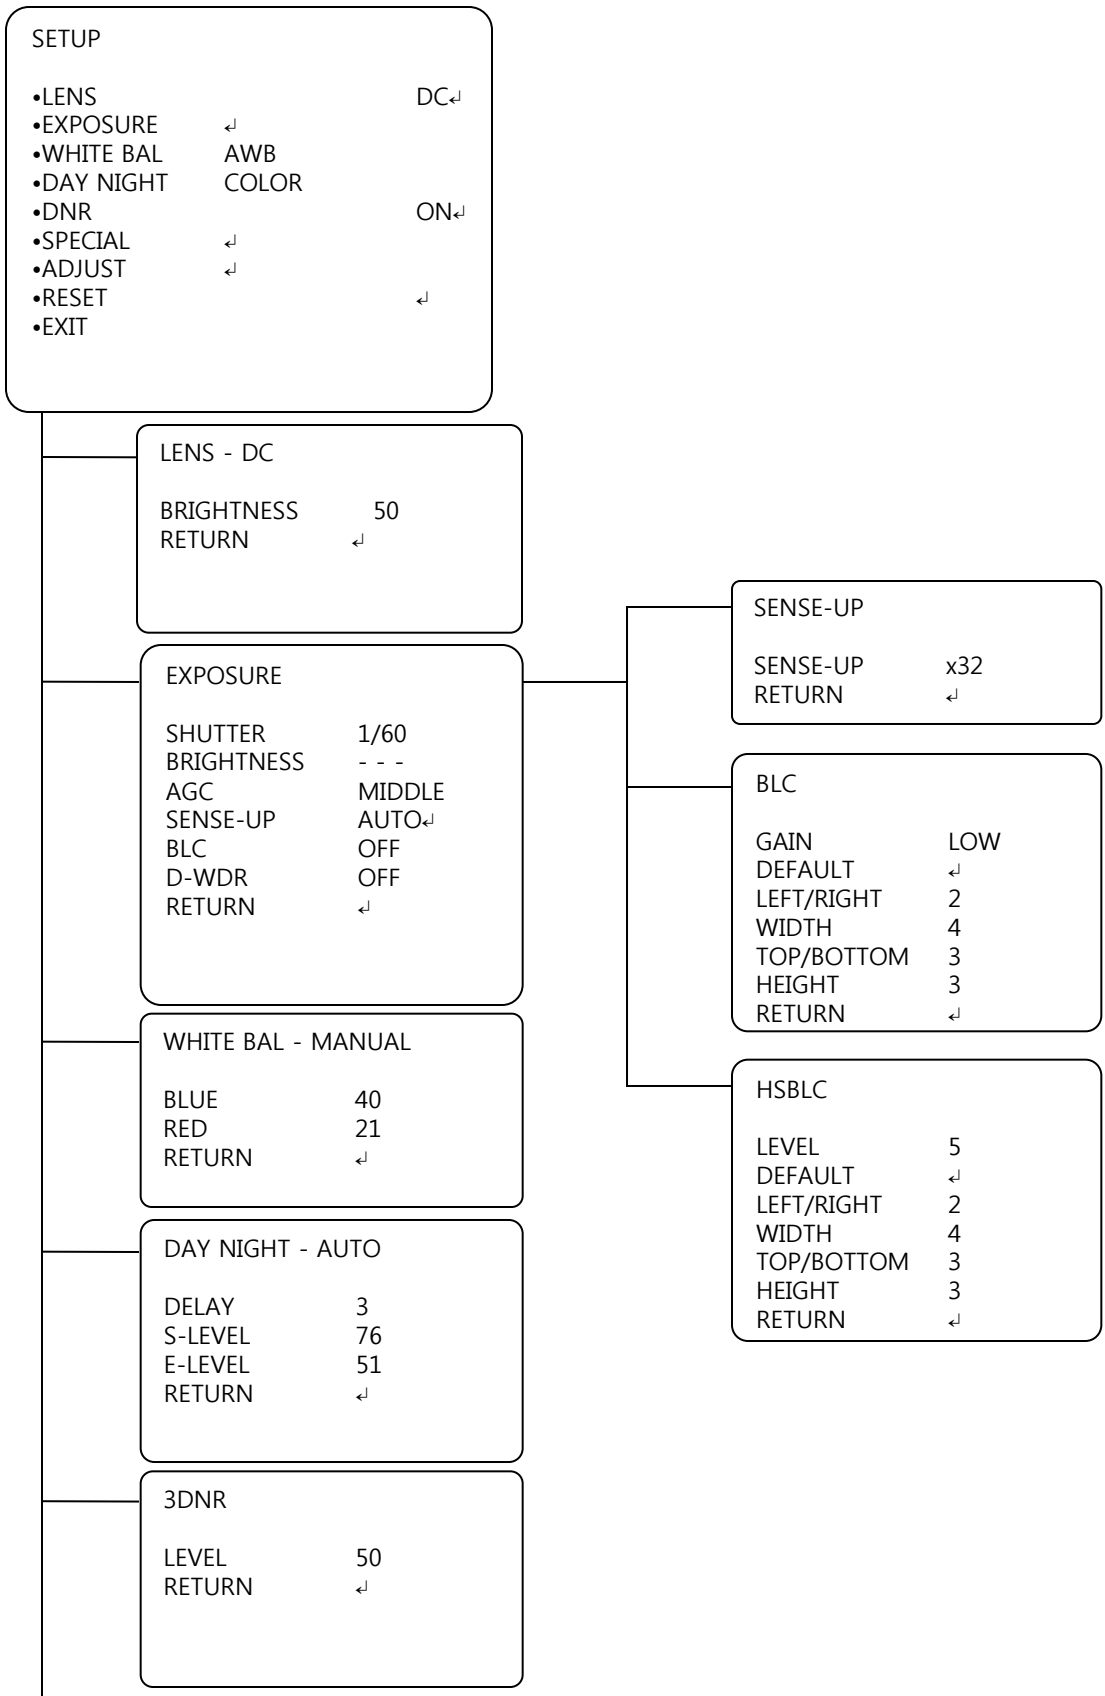

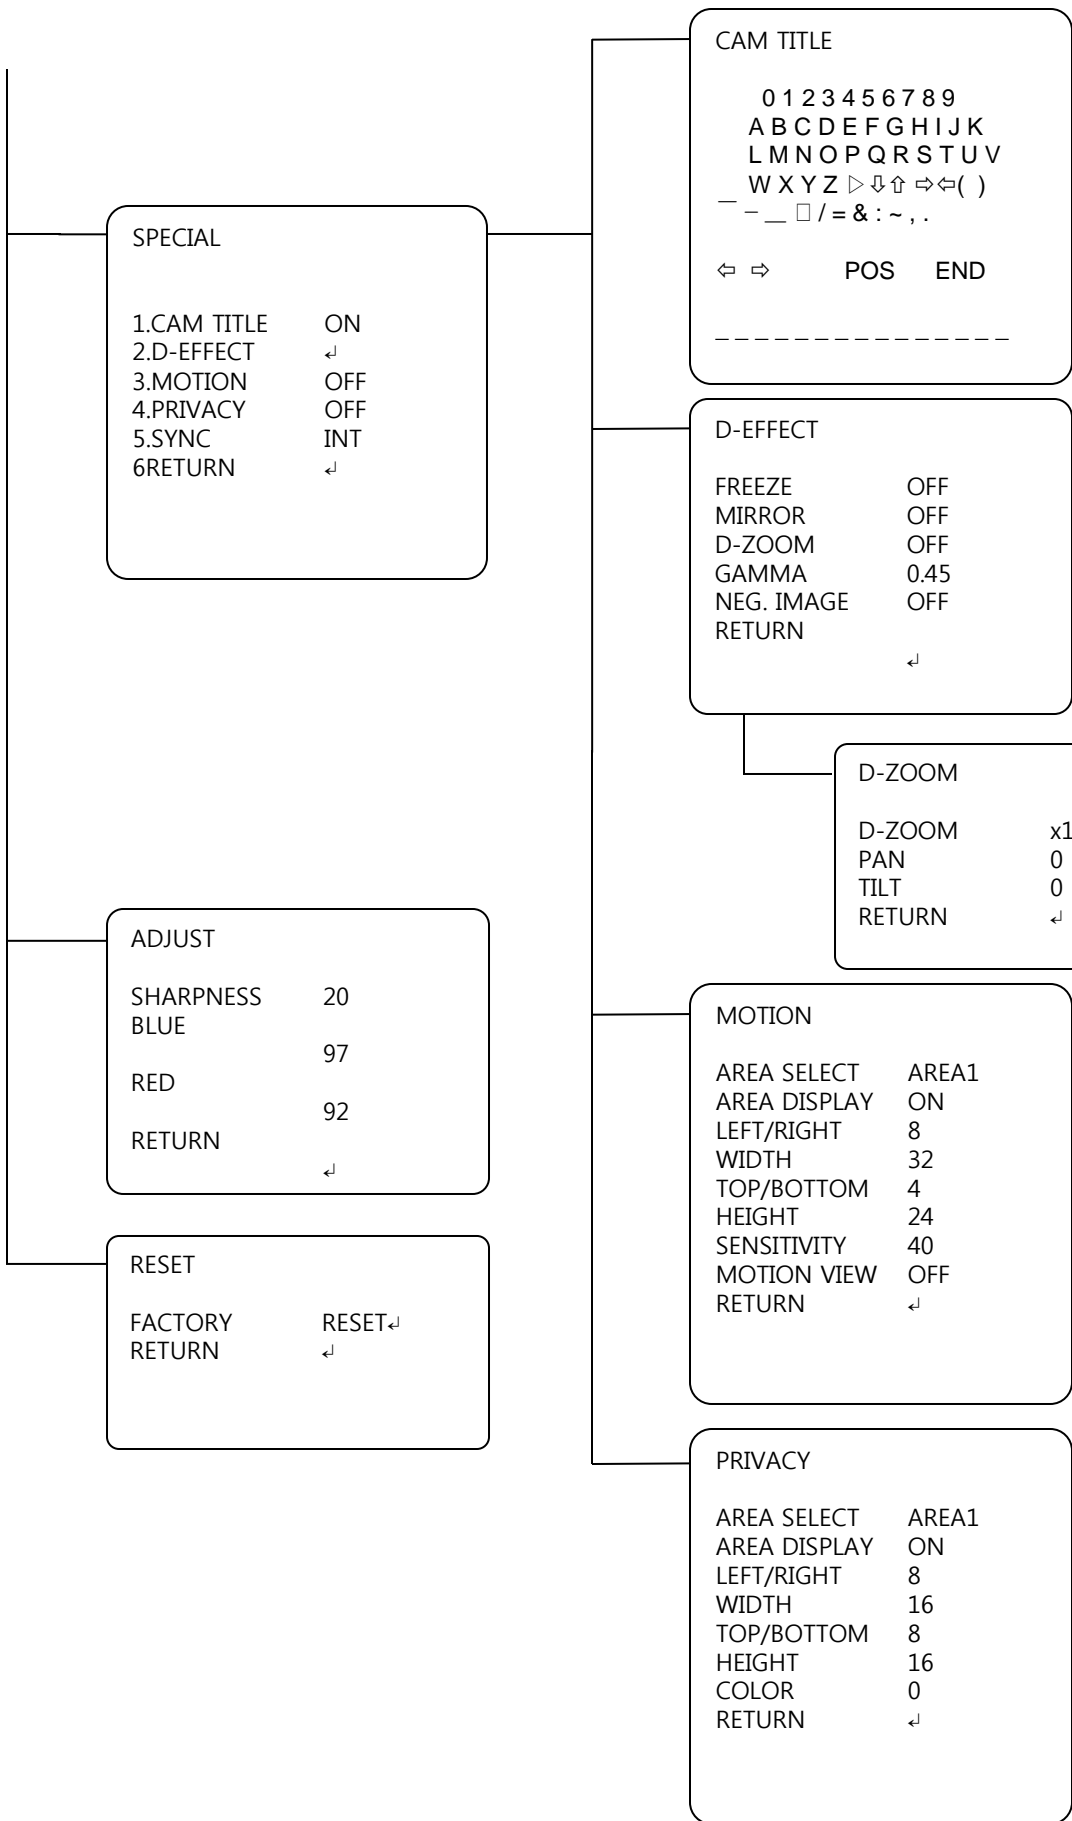

SPECIAL

1.CAM TITLE	ON
2.D-EFFECT	↵
3.MOTION	OFF
4.PRIVACY	OFF
5.SYNC	INT
6.RETURN	↵

CAM TITLE

0 1 2 3 4 5 6 7 8 9
 A B C D E F G H I J K
 L M N O P Q R S T U V
 W X Y Z ▷↓↑⇐⇒()
 - _ □ / = & : ~ , .

⇐ ⇒ POS END

D-EFFECT

FREEZE	OFF
MIRROR	OFF
D-ZOOM	OFF
GAMMA	0.45
NEG. IMAGE	OFF
RETURN	↵

D-ZOOM

D-ZOOM	x1.0
PAN	0
TILT	0
RETURN	↵

ADJUST

SHARPNESS	20
BLUE	97
RED	92
RETURN	↵

RESET

FACTORY	RESET↵
RETURN	↵


MOTION

AREA SELECT	AREA1
AREA DISPLAY	ON
LEFT/RIGHT	8
WIDTH	32
TOP/BOTTOM	4
HEIGHT	24
SENSITIVITY	40
MOTION VIEW	OFF
RETURN	↵

PRIVACY


AREA SELECT	AREA1
AREA DISPLAY	ON
LEFT/RIGHT	8
WIDTH	16
TOP/BOTTOM	8
HEIGHT	16
COLOR	0
RETURN	↵

5. Explanation of SETUP Menu

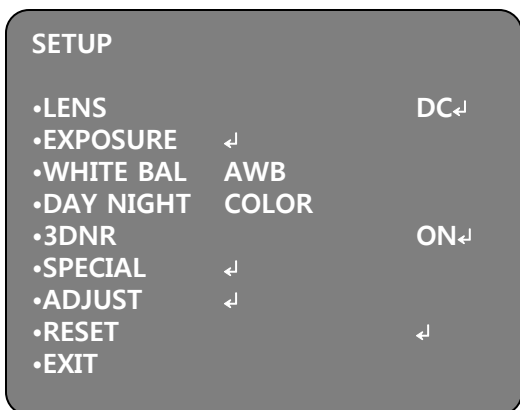

1. LENS

DC(Default) : DC sub-menu

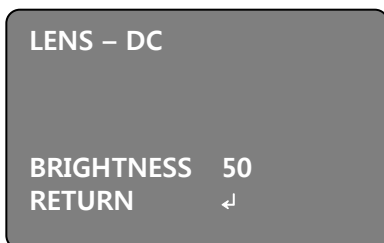

(1) BRIGHTNESS

Changes brightness level (Range : 0~100)
Darker (0) ~ Brighter (100)

(2) RETURN

Return to the Main Menu

*TIP

If set up Brightness with Manual lens, it operated by EXPOSURE sub-menu.

2. EXPOSURE

EXPOSURE sub-menu



(1) SHUTTER

Current shutter speed
1/60(Default) – NTSC 1/60 (Default)-PAL
1/50(Default) FLK, 1/250, 1/500, 1/2000, 1/5000
1/10000, 1/100000

(2) BRIGHTNESS


No operation (When lens is manual mode, it is operates)

(3) AGC(Auto Gain Control)

AGC Level
OFF, LOW, MIDDLE(Default), HIGH

(4) SENSE-UP

OFF : Disable SENSE-UP mode
AUTO : AUTO sub-menu

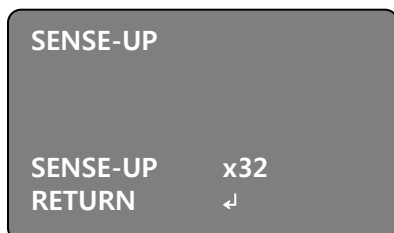

• SENSE-UP

Select sense-up level
x2, x4, x8, x16, x32(Default), x64, x128, x256

• RETURN

Return to the EXPOSURE sub-menu

(5) BLC(Backlight Compensation)

Value of each BLC on mode

- OFF(Default) : Disable BLC mode
- BLC : Go to BLC mode

BLC	
GAIN	LOW
DEFAULT	↵
LEFT/RIGHT	2
WIDTH	4
TOP/BOTTOM	3
HEIGHT	3
RETURN	↵

GAIN

BLC Level :
Low(Default),MIDDLE,HIGH

DEFAULT

Initializes the changed category in
BLC menu

LEFT / RIGHT / TOP / BOTTOM / HIGHT

Backlight Compensation weighting Zone

RETURN

Return to the EXPOSURE sub-menu

- HSBLC : HSBLC mode

HSBLC	
LEVEL	5
DEFAULT	↵
LEFT/RIGHT	2
WIDTH	4
TOP/BOTTOM	3
HEIGHT	3
RETURN	↵

LEVEL

BLC level (Range : 0~8 / Default : 5)
Backlight Compensation Weighting
value of each BLC mode

DEFAULT

Initializes the changed category in HSBLC menu

LEFT / RIGHT / TOP / BOTTOM / HIGHT

Backlight Compensation weighting Zone

RETURN

Return to the EXPOSURE sub menu

(6) D-WDR (Digital Wide Dynamic Range)

OFF (Default) : Disable D-WDR mode

INDOOR : Indoor D-WDR mode

OUTDOOR : Outdoor D-WDR mode

(7) RETURN

Return to the main menu

3. WHITE BALANCE

- ATW : Auto Trace White balance mode
- AWB (Default) : Wide Range auto white balance
- AWC → SET
- Manual : Go to Manual Sub-menu
- Adjust R/B Gain Manually

WHITE BAL - MANUAL	
BLUE	40
RED	21
RETURN	↵

BLUE
Change BLUE Gain(Range : 0~100)

RED
Change RED Gain(Range : 0~100)

RETURN
Return to the main menu

4. DAY NIGHT

- COLOR(Default) : Day fix mode
- B/W : Night fix mode
- AUTO : Automatically COLOR / BW(Day & Night) According to Illumination change

DAY NIGHT - AUTO	
DELAY	3
S-LEVEL	76
E-LEVEL	51
RETURN	↵

DELAY
Time to protect susceptible conversion
of Color and BW
Range : 0~63(Default : 3)

S-LEVEL
Starting Level-Adjust start level to set Color and BW

E-LEVEL
Ending Level-Adjust start level to set Color and BW

RETURN
Return to the Main menu

5. 3DNR

- ON(Default) : Changes Level (Range : 0~100)
- OFF : Disable the DNR

3DNR	
LEVEL	50
RETURN	↵

LEVEL
DNR level(Default:50) : Range 0~100

RETURN
Return to the Main menu

6. SPECIAL

SPECIAL	
1. CAM TITLE	OFF
2. D-EFFECT	↵
3. MOTION	OFF
4. PRIVACY	OFF
5. SYNC	INT
6. RETURN	↵

CAM TITLE	
0 1 2 3 4 5 6 7 8 9	
A B C D E F G H I J K	
L M N O P Q R S T U V	
W X Y Z ▸ ▾ ↕ ⇨ ⇩ ()	
— — _ □ / = & : ~ , .	
⇨ ⇩ POS END	

D-EFFECT	
FREEZE	OFF
MIRROR	OFF
D-ZOOM	OFF
GAMMA	0.45
NEG. IMAGE	OFF
RETURN	↵

D-ZOOM	
D-ZOOM	x1.0
PAN	0
TILT	0
RETURN	↵

(1) CAM TITLE

OFF : Disable CAM TITLE

ON : Refer to the CAM TITLE editing menu

- Select position of CAM TITLE menu
- When the cursor is blinking. You can select the character by PUSH button
 - ⇨ : Previous Character
 - ⇩ : Next Character
 - POS : Change the position of the CAM TITLE. After changing the position, you push the setup button one more time.
 - END : After set click this letter to end up.

(2) D-EFFECT

D-EFFECT sub menu

FREEZE

OFF(Default) : Real picture

ON : Still picture

MIRROR

OFF: Normal picture

MIRROR : Horizontal reverse picture

ROTATE : Horizontal and vertical reverse picture

D-ZOOM(Digital ZOOM)

D-ZOOM -Digital ZOOM Range :

x1.0~x32.0

PAN - Pan Range : -100~100

TILT – Tilt Range : -100~100

RETURN – Return to the previous menu

GAMMA

Default – 0.45(Range : 0.05~1.00)

NEG.IMAGE

OFF(Default) :Positive picture

ON : Negative inverted picture

RETURN

Return to the previous menu

MOTION

AREA SELECT	AREA1
AREA DISPLAY ON	
LEFT/RIGHT	8
WIDTH	32
TOP/BOTTOM	4
HEIGHT	24
SENSITIVITY	40
MOTION VIEW	OFF
RETURN	↵

(3) MOTION

OFF : Disable CAM TITLE

ON : Refer to the CAM TITLE editing menu

AREA SELECT

- Area 1~area4
- The zone of motion detection

AREA DISPLAY

- ON(Default) : Enable the motion detection
- OFF : Disable the motion detection

LEFT/RIGHT

- Horizontal starting point for motion detection zone
(Range : 0~100)

WIDTH

- Horizontal terminating point for motion detection zone
(Range : 0~100)

TOP/BOTTOM

- Vertical starting point for motion detection zone
(Range : 0~100)

Height

- Vertical terminating point for motion detection zone
(Range : 0~100)

SENSITIVITY

- Range : 0~40

MOTION VIEW

- OFF(Default)
- ON : Display motion block

RETURN

- Return to the previous menu

PRIVACY

AREA SELECT	AREA1
AREA DISPLAY ON	
LEFT/RIGHT	8
WIDTH	16
TOP/BOTTOM	8
HEIGHT	16
COLOR	0
RETURN	↵

(4) PRIVACY

OFF : Disable privacy control

ON : Refer to the privacy control menu

AREA SELECT

- Area 1~Area8
- Privacy mask zone number

AREA DISPLAY

- ON(Default) : Enable the privacy zone
- OFF : Disable the privacy zone

LEFT/RIGHT

- Horizontal starting point for privacy zone
(Range : 0~100)

WIDTH

- Horizontal terminating point of privacy zone
(Range : 0~100)

TOP/BOTTOM

- Vertical starting point of privacy zone
(Range : 0~100)

Height

- Vertical terminating point of privacy zone
(Range : 0~100)

COLOR


- Display Color(Range : 0~15)

RETURN

- Return to the previous menu

7. ADJUST

Adjust sub menu

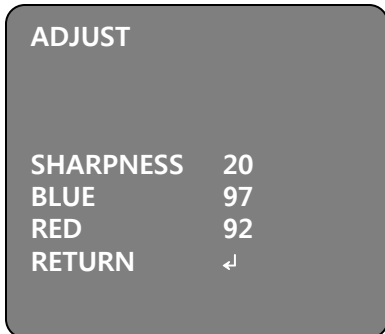

SHARPNESS

- Range : 0(blunt image)~31(sharp image)

BLUE

- Range : 0~100
- Blue gain

RED

- Range : 0~100
- Res gain

RETURN

- Return to the previous menu

8. RESET

RESET sub-menu



FACTORY

- Restore to factory default condition

RETURN

- Return to the main menu

9. EXIT

Save the SETUP menu and exit

MEMO



*** Design and specifications are subject to change without notice.**